



Cleenol Graffiti Remover Trigger Spray – 750ml

Variant code: 06-567

A low-odour, emulsifiable graffiti remover designed to remove aerosol spray paint, marker pen and ballpoint from stone, plastic, metal and brickwork. Also great for cleaning stubborn marks from white boards.

Directions For Use:

- Apply product to surface.
- Leave to activate for 3-5 minutes.
- Use a power washer to remove or scrub manually with a stiff bristle brush then rinse.

| Property | Value |
|-----------------|--|
| Fragrance | Characteristic |
| Dilution | Use undiluted |
| Area of Use | Remove aerosol spray paint, marker pen and ballpoint from stone, plastic, metal and brickwork |
| CLP | flammable, corrosive, irritant |
| How to Use | Apply product to surface. Leave to activate for 3-5 minutes. Use a power washer to remove or scrub manually with a stiff bristle brush then rinse. |
| Chemical Colour | Clear |